



Temperature Transmitter

Datasheet

SUP-ST500

SUP-ST500 is a head mount temperature transmitter with a single input. The single input accepts thermocouples, RTD, resistance or voltage source. All inputs are linearized and converted in to an industrial standard 4 to 20 mA output for transmission to your system.SUP-ST500is the choice for your monitoring applications.

FEATURES

■ Highlights

- Can convert all inputs to 4-20 mA
- Input: thermocouples, RTD, resistance or voltage
- Configuration directly via PDA or PC
- Built-in Cold Junction Compensation
- Available with screw-in temperature probe



TECHNICAL DATA

■ Specifications

Accuracy	≤0.1%FS
Power supply	12-40V
Signal input	RTD TC resistance mV
Signal output	4-20mA 1-5V(customized)
Digital communication	Hart protocol
Response time	≤1s
Working temperature	-40-85
Ingress protection	4g^2-150Hz
Cold Junction Compensation	Build-in
Configuration	PAD or PC

■ *RTD temperature probes*

Description	Measuring range °C		Minimum measuring range	Connection type
PT100	-200	850	10K	Three-wire
Cu50	-50	150	10K	Three-wire


■ *Thermocouples*

Description	Measuring range °C		Connection type	Minimum measuring range
B	400	1820	Two-wire	500K
E	-100	1000	Two-wire	50K
J	-100	1200	Two-wire	50K
K	-180	1372	Two-wire	50K
N	-180	1300	Two-wire	50K
R	-50	1760	Two-wire	500K
S	-500	1760	Two-wire	500K
T	-200	400	Two-wire	50K

■ *RTD temperature probes*



Description	Measuring range Ω		Minimum measuring range	Connection type
Resistance transmitter	0	4500	500K	Two-wire

Block Diagram

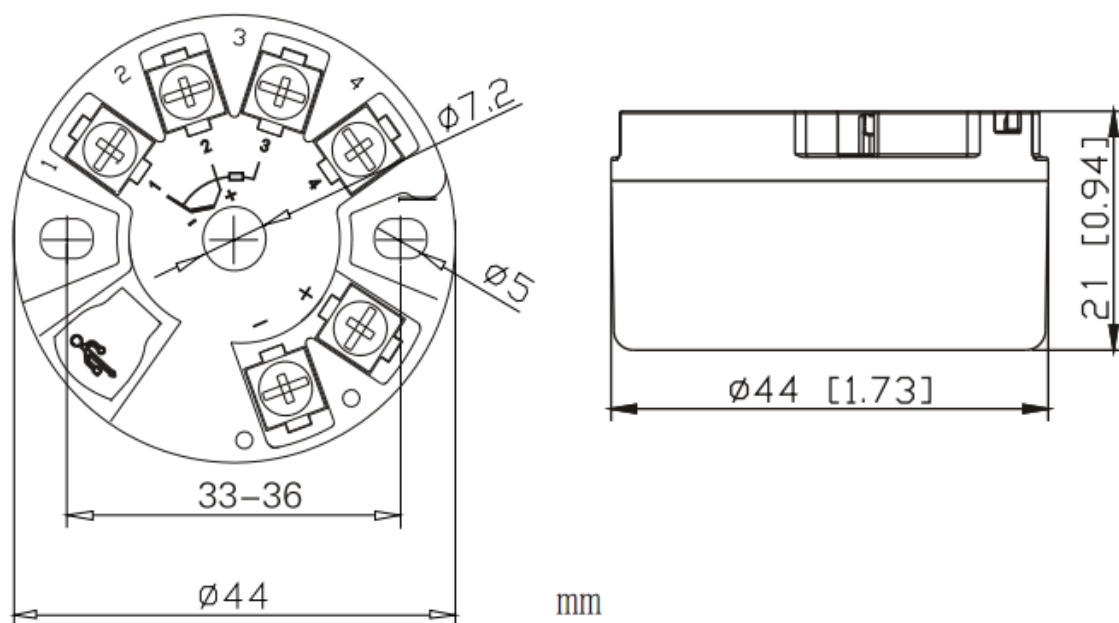

Wiring

■ **Note:** When mounting on a sensor head, do not overtighten the screws.
Take necessary measure to avoid corrosion or damage of cables and wires.

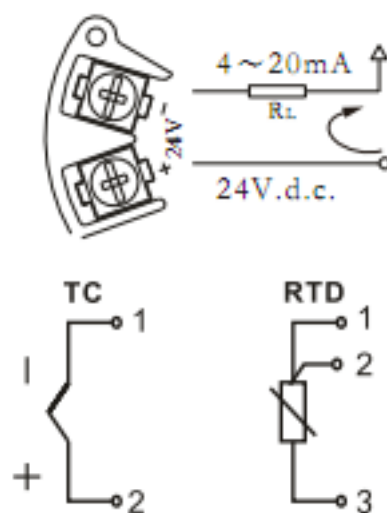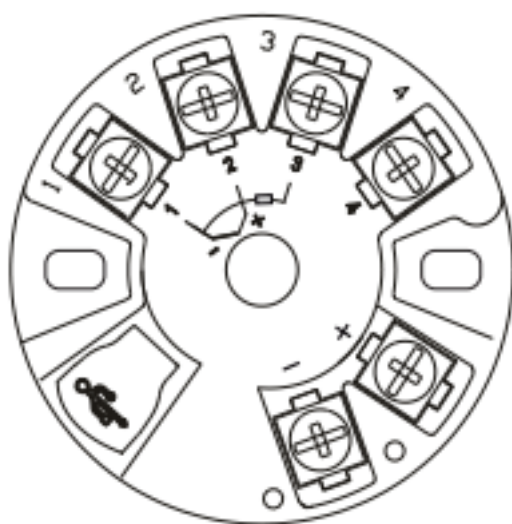

CONFIGURATION INTERFACE

■ Function

- Install the driver
- Connect the transmitter with PC, open the software
- Choose the sensor type and temperature unit
- Set the temperature range accordingly
- Click ok or amend if need modify and then finish
- Other parameters are default and no need to set normally

■ Fenster

The screenshot shows the 'Intelligent temperature transmitter software V3.4' window. At the top, there's a header with the Supmea logo and images of various temperature transmitters. Below this, the interface is divided into several sections:

- Process Monitor:** Contains four input fields for 'Temperature' (°C), 'Current' (mA), 'Percentage' (%), and 'Cold spot temperature' (°C). Below these are 'Start' and 'Stop' buttons.
- Setting:** Contains a 'Sensor' dropdown menu, a 'Unit' dropdown (set to 'C'), 'Lower range' and 'Upper range' input fields, and a 'Damping' dropdown (set to '0'). Below these are 'OK' and 'Amend' buttons.
- Master variable transmit:** Contains 'Zero' and 'Adjust' input fields, and 'OK' and 'Amend' buttons.
- Cole spot transmit:** Contains 'Zero' and 'Adjust' input fields, and 'OK' and 'Amend' buttons.
- 4-20mA output adjustment:** Contains a 'setting point' section with radio buttons for '4mA' (selected) and '20mA', a 'Calibration' button, and '+' and '-' buttons. Below are 'OK' and 'Amend' buttons.

At the bottom left, the status is 'Status:waiting operation'. At the bottom right, there is a 'Serial port:' dropdown menu.



Supmea

Supmea Automation Co.,Ltd

Tel: 86-15158063876 E-mail: sales@supmea.com

Add: 3st floor, Building 2, No. 452, No. 6 Street, Hangzhou, Zhejiang, China

Website: www.supmea.com